


Assembly Instructions

Front Engine Guards – Honda Shadow VT1100 C2 SC32 / Tourer SC37 / C3 Aero

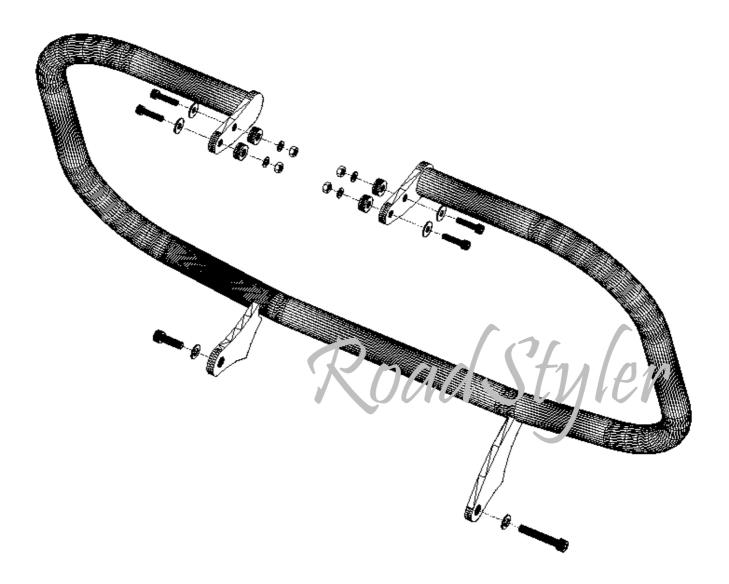

General information and comments:

- 1. Do not tighten the screws too tight, so as not to bend the handles and not destroy the elements (eg frame) of bike.
- 2. After installation, verify that you are free to operate the clutch and brake pedals.
- 3. Remember that the engine guards and are not designed to protect the driver and passenger, but to protect the motorcycle to a limited extent. Engine guards may be effective at low speeds.