


Passenger Backrest – Honda:

- **VT1100 C (SC18) 1987-1996 + Spirit (SC18) 1997-2011,**
 - **VT1100 Sabre SC43,**
 - **VT1100 Tourer SC37,**
 - **VT1100 C2**

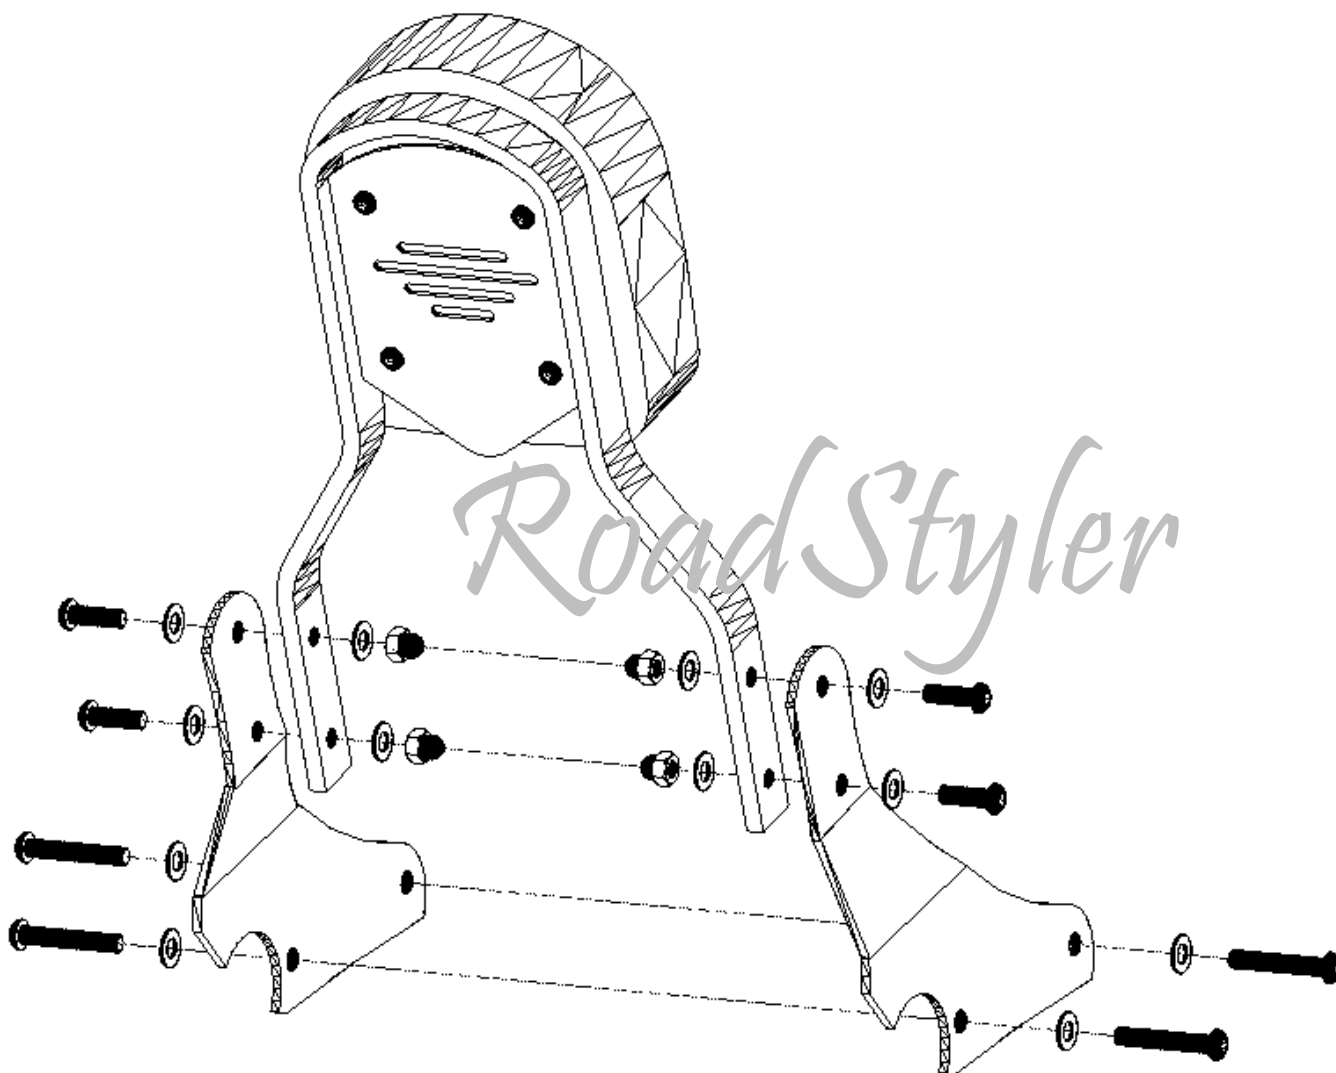

General information and comments:

1. Do not tighten the screws too tight.
2. Tighten all screws at the end - after assembling the entire structure on a motorcycle.
3. Always check the screw length and pitch - compare to the original. The final length of the screw depends on the installed components on the bike.
4. Passenger backrests for listed models VT1100 may vary in sizes and handles, while the assembly is the same.