


Passenger Backrest – Honda VTX1300 and VTX1800

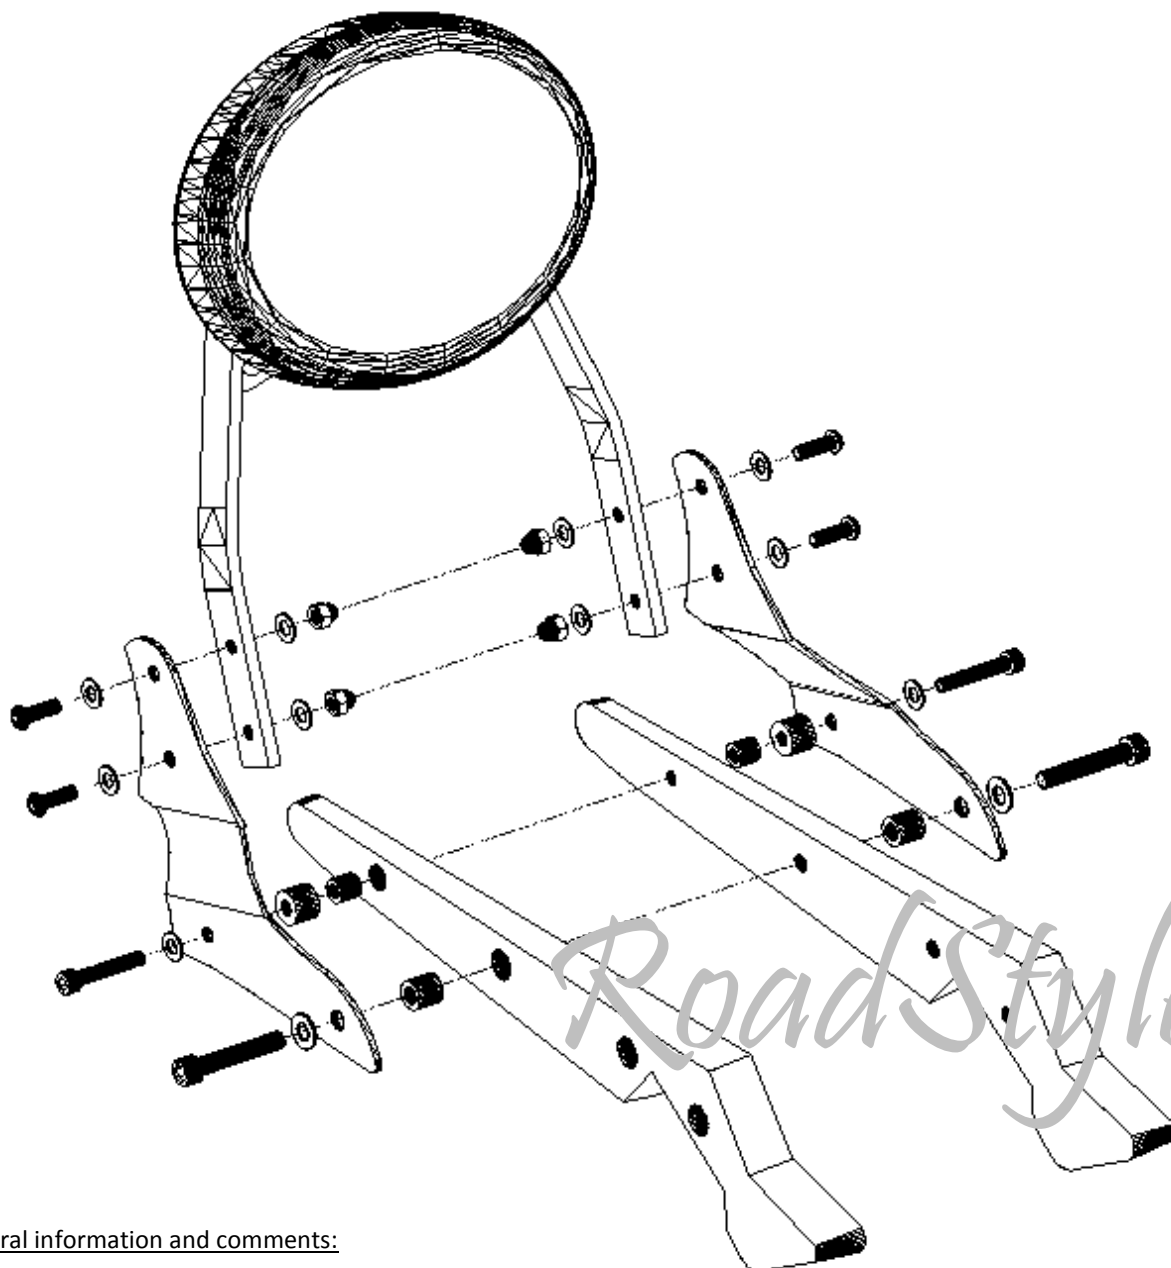

General information and comments:

1. Do not tighten the screws too tight.
2. Tighten all screws at the end - after assembling the entire structure on a motorcycle.
3. Always check the screw length and pitch - compare to the original. The final length of the screw depends on the installed components on the bike.
4. Passenger backrests for models VTX1300/1800 Custom and Retro vary in sizes and handles, while the assembly is the same.
5. Use stainless steel sleeves only when in the bike originally were used allen screws. If in the motorcycle hex screws were used - use only 1 chromed sleeve at the back and 2 washers (M10) at the front on each side.