


Passenger Backrest – Suzuki C1500T / C90T from 2013-

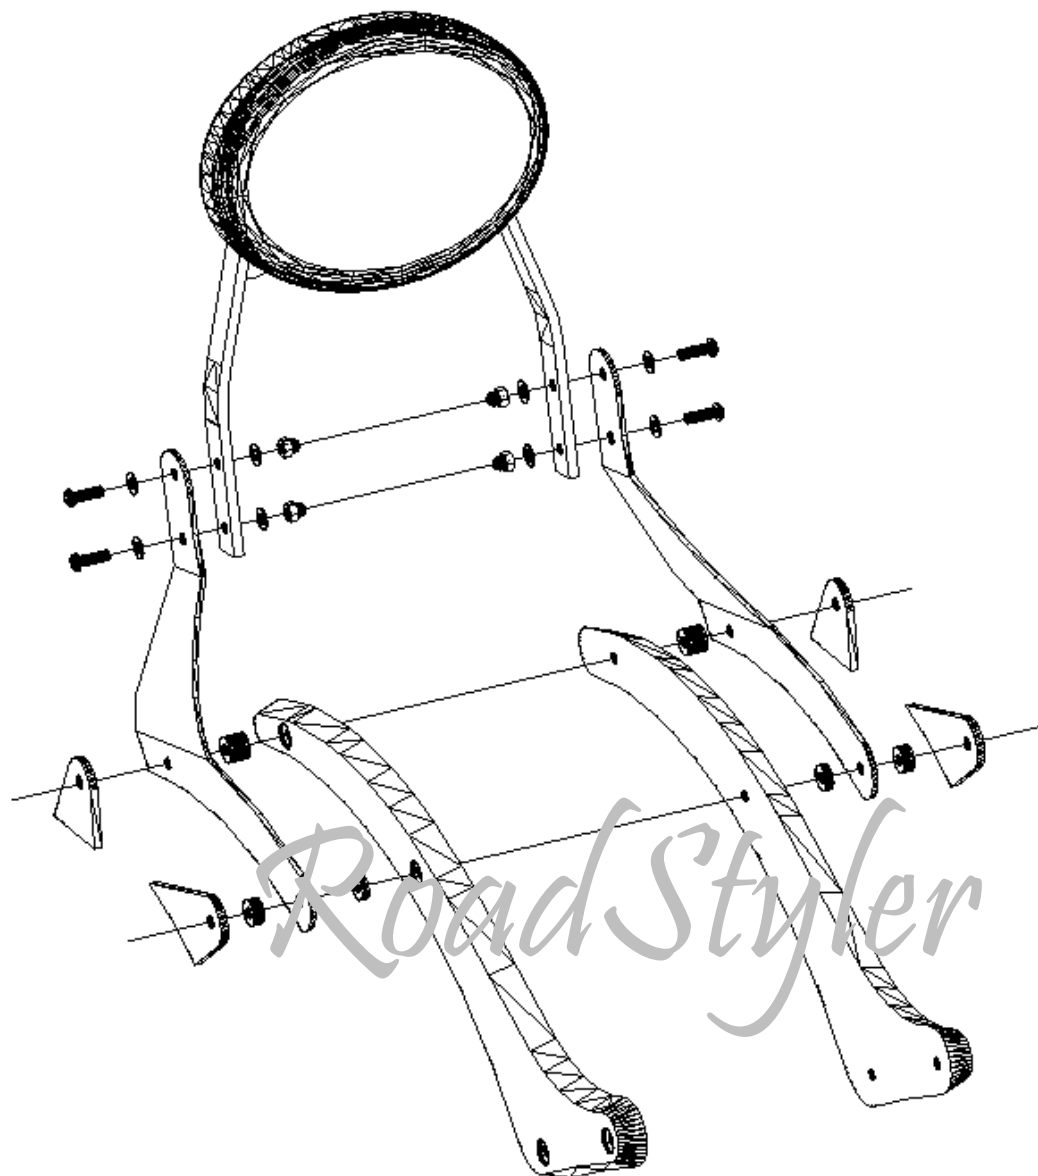

General information and comments:

1. **Reuse originally installed screws.**
2. Do not tighten the screws too tight.
3. Tighten all screws at the end - after assembling the entire structure on a motorcycle.
4. Always check the screw length and pitch - compare to the original. The final length of the screw depends on the installed components on the bike.